ATP570

PIR + Microwave Detector


MOUNTING & OPERATING MANUAL



Issue Date: 04/12/2013

TECHNICAL SPECIFICATIONS*		
Infrared Sensor	Dual element, phyroelectric, digital	
Microwave Sensor	DRO, patch antenna, 10.525 GHz	
Power Supply	8 – 18V DC, 20mA	
Alarm Output	NC or NO 30VDC, 0.2A maks.	
RFI Immunity	Ave. 20V/m (10~2000 MHz)	
Tamper switch	N.C (Front cover open activated)	
Activation LED	Three colour, can be disable.	
Detectable speed	0.3 ~ 1.5m/saniye	
Mounting Height	2.1 ~ 3.6m	
Humidity	95% RH (max)	
Op. Temperature	-20°C ~ 45°C (-4°F ~ 113°F)	
Dimensions	108 x 63 x 50 mm	
Weight	90g	
Alarm Period	3 sec.	


* Can be changed by manufacturer without notification.

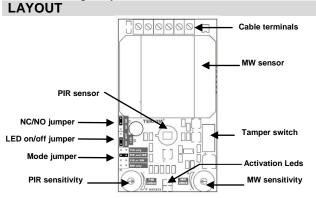


Warning: Do not touch to the Infrared sensor.

CABLE CONNECTIONS

 POWER : 8 ~ 18 VDC power supply
ALARM : Control panel zone input (N.C)
TAMPER : Control panel 24 hours NC input




SENSITIVITY SETTING

 

MW and PIR sensor sensitivity setting: turn it to + direction


for high sensitivity and - direction for low sensitivity.

 NC/NO JUMPER



Changes the output polarity of alarm output.

 DISABLING LED



If you prefer the not to indicate the sensing status, put this jumper to OFF position.

WORKING MODE



There are different working options explaines as below:

- PIR only: Only PIR section of the detector operable.
- PIR and MW: Output changes the status only both sensors detecting movement.
- PIR or MW: Output changes the status either PIR or MW sensor detecting movement.
- MW only: Only MW section of the detector operable.

ACTIVATION LED

The meaning of the activation led as followed:


Colour	Meaning
Continuous RED	Alarm
Continuous GREEN	Only MW sensor is detecting
Continuous YELLOW	Only PIR sensor is detecting
Off	No Detection

WARNINGS

- 1. Do not expose the detector to direct or reflected light.
- Be sure that there is nothing which prevent detectors view angle.
- 3. Do not mount the detector next to the devices which cause to instantaneous temperature alternation.
- 4. Mount the detector recommended height and to the strong surface.

- Please note that PIR detector is more sensitive to horizontal movements. However, MW sensor is more sensitive to vertical movements.
- Do not touch PIR sensor. If needed to clean, use cotton with alcohol.

DETECTION AREA

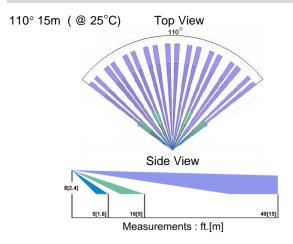

MALFUNCTIONS THAT REQUIRE TECHNICAL SERVICE

In case of any malfunction or below conditions contact with your authorized service,

- ✓ When Mains cable or the plug is harmed,
- ✓ Contact of device with a fluid,
- ✓ Exposure of rain and water,
- ✓ Fell down of device or harmed outer cover,
- ✓ Serious performance fall on the device,
- Depending on the instructions stated in manual, if your device not working properly, further usage or possible wrong usage may cause other malfunctions. Contact with your authorized service in such terms.

SPARE PART

If the repair will be done by spare parts, to avoid fire, electricity shock or any other hazardous conditions, Make sure your service is using original parts or parts compatible with your equipment.

SAFETY CHECK

To make sure if your device working properly and in safe conditions or not, demand service from your dealer to check device functionality.

TRANSPORTATION

Device must be carefully transported avoiding all physical bump, stroke and possible fluid entry. Malfunctions that caused by improper transportation is not under warranty.

HUMAN AND NATURE CONDITION

This device contains no chemical or biological elements that could harm human condition.

MAINTENANCE ON YOUR OWN

Do not try to fix the device on your own removal of cover may end up with electricity shock.

In case of any defect or malfunction, contact with your dealer or with authorized service. All the technical interventions has to be done by technicians of service company. Device must be cleaned up with a dry fabric. No-chemicals are allowed for cleaning.

MANUFACTURER

Bilgi Elektronik A.Ş.

Address:

Dudullu Organize Sanayi Bölgesi 1. Cadde İsmet Tarman İş Merkezi No:1 Kat:2 No:32 Ümraniye/İstanbul

Tel: +90 216 455 88 46 Fax: +90 216 455 99 06

www.bilgielektronik.com.tr

Sales: sales@bilgielektronik.com.tr Technical Support: support@bilgielektronik.com.tr



